# **StarLine M13**



USER MANUAL

# **GENERAL DESCRIPTION**

**StarLine M13** universal tracker offers an easy and economy vehicle positioning, live tracking and basic anti-theft security features.

Device can send text message with exact position and link to online map.

It can be quickly mounted in any road vehicles, motorcycles, quad bikes, boats and electric scooters. Controlled object can be real time monitored on desktop at subscripting from charling online work envice and Starting 2

subscription free <u>starline.online</u> web service and StarLine 2 free mobile app.

### **Major benefits**

- Universal input power for various means of transport
- Quick installation
- Rugged waterproof housing
- Lifetime free subscription tracking
- Geofence In / Out alert
- Tamper alert (shock sensor)
- Black box coordinates memory
- Remote engine cut

# **TECHNICAL SPECIFICATION**

Features	Values	
GSM cellular bands	850/900/1800/1900 MHz	
SIM card	1 micro-SIM	
GSM antenna	embedded	
GPS+GLONASS receiver	embedded	
Input power	9-90 V	
Rated standby current	5 mA	
Water resistance	IP65	
Operating temperature	-40 +85 °C	
Dimensions	72x30.2x13 mm	
Weight	37 g	
Front side	Rear side	

GPS+GLONASS

GSM indicator (green)

indicator

(blue)


SIM card slot

Wire cable

. .


### INSTALLATION RECOMMENDATIONS

#### Please install device with a qualified specialist assistance.

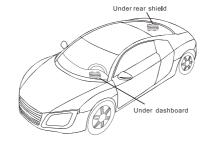

### Note:

 Device should be installed facing up towards the sky. The metal thermal barrier or heating layer on windshield may affect a signal. Change the mounting location to improve a signal strength.



# Inside the floor compartment





Near the head light


# **CONNECTION DIAGRAM**

### SIM card installation

Open tracker housing up with flat item and insert SIM card in the slot on the circuit board. Put the plastic cover back.

### Sample NC engine cut connection diagram

Universal output (yellow wire) can be used for remote engine blocking like in example below. Max load for universal output – 200 mA (–).

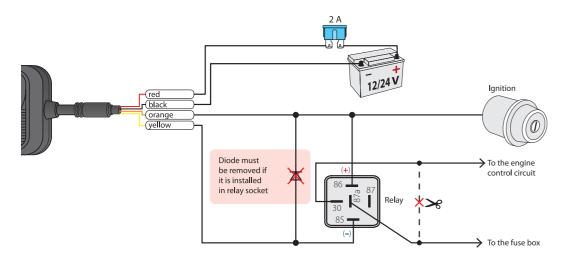

This wiring must be done by gualified technician.

# CONFIGURATION



Record an owner phone number (SOS1) to device memory to be able control tracker and receive notifications.

All commands from SOS-number are sent without GSM password. Commands from other phones must be added with the GSM password between command text with comma and # symbol. For example, to request current position send the following text **POSITION,1234**, where **1234** — GSM password, **POSITION#** — command text.

To record an owner phone number as SOS number (if not saved yet), or change SOS number without access to previously saved one, send the text command SOS,XXXX,A,+XXXXXXXX#, where

XXXX — GSM password (4 digits, by default 1234),
 +XXXXXXXXXXX — telephone number in international format that must be saved as SOS-number.

To change GSM-password after setting SOS-number make following:

- Send SMS-command PWDSW,OFF#
- After receiving a responding message send SMS command PASSWORD,XXXX,YYYY#,

where XXXX – 4 digits of currentGSM password,

YYYY – 4 digits of new GSM password

 After receiving a responding message send SMS command PWDSW,ON#

## SMS COMMANDS LIST

SMS commands	Description	
POSITION#	Request current location	
SOS,XXXX,A,+XXXXXXXXXXX	Set owner phone number, where XXXX - GSM password (default 1234), +XXXXXXXXXX - owner phone number	
SOS,XXXX,D,+XXXXXXXXXX#	Delete owner phone number	
SOS#	Request owner phone numbers	
IMEI#	Request device IMEI to register on starline. online / mobile app	
APN,NAME,LOG,PSW#	Set network access point, where: NAME - apn name, LOG - user login, PSW - password	
GPRSSET#	Request network status	
STATUS#	Request device status	
PASSWORD,OLD,NEW#	Change GSM password, where OLD - old (default) password, NEW - new password	
PWDSW,OFF#	Switch GSM password Off (from SOS1 owner number)	
PWDSW,ON#	Switch GSM password On (from SOS1 owner number)	
PRELAY,1#	Activate universal output (from SOS1 number only)	
PRELAY,0#	Deactivate universal output (from SOS1 number only)	
PARAM#	Request configuration parameters	
RESET#	Reboot device	
FACTORY#	Reset device to factory settings	

# REGISTRATION

ORGOT PASSWORD? WATCH DEMO

PRIVACY POLICY

Language

Install StarLine 2 app or browse <u>starline.online</u> web service
 Register a new StarLine account
 Select Add device menu and follow the guide





App Store

@ :	StarLine	Registration
•••		👤 Your e-mail
•	Satellite security and	P Create a password 🛛 👁
C		P Repeat password
	interning control	I know number my device's SIM-card
nber		1+ Register
	🛎 Oʻzbek 🖬 Lictuviq 🔤 Slovenčina 🕒 Kazar, tisi	
6	Italiano Español 🚆 Shorgeo	
	Deutsch Eesti Polski 💥 English Pyccook Virpaiksuka	By signing up, I agree with <u>service</u> agreement
	Download Startine	Configure StarLine M15/M17 tracker Step by step configuration in 3 minutes
	<ul> <li>⑦ :</li> <li>■</li> <li< td=""><td>Catellite security and monitoring service</td></li<></ul>	Catellite security and monitoring service